



# HPE ProLiant DL380 Gen9 Server Fan Replacement

This guide illustrates the process for removing and replacing a fan.


Written By: Michael Johnson



## INTRODUCTION


The fans are hot-pluggable and can be removed without powering down the server.

## Step 1 — Extend the server from the rack.

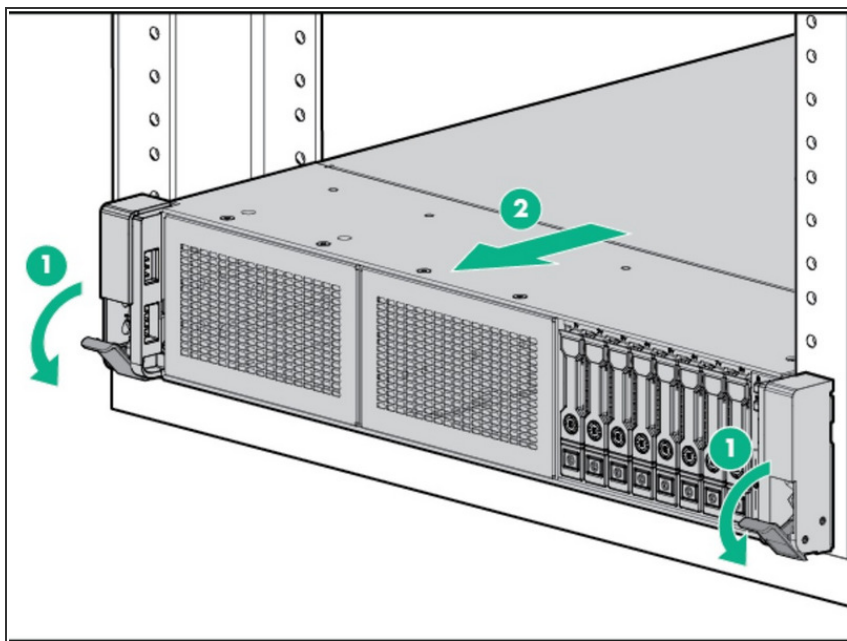


- Pull down on the quick release levers on each side of the server.

## Step 2 — Remove the access panel

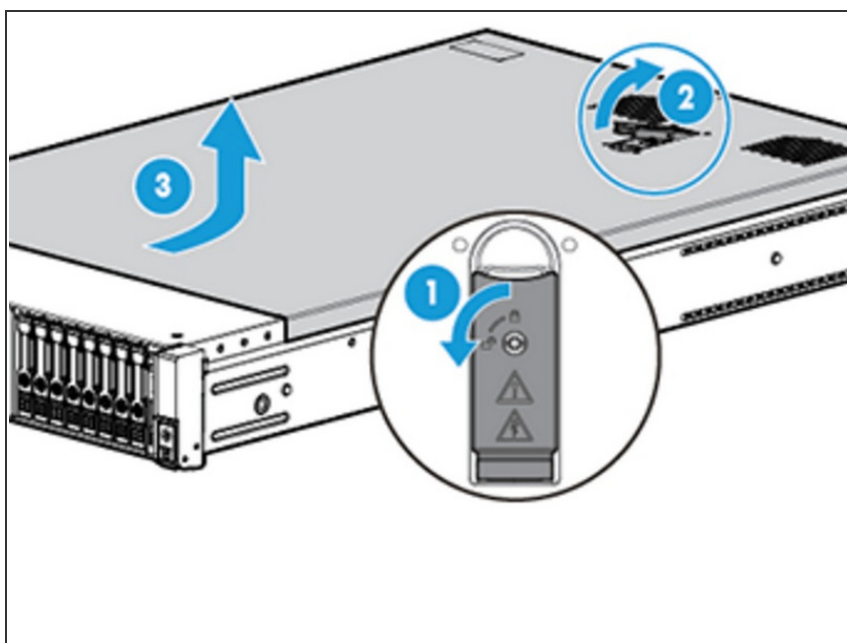

- Unlock or open the latch, slide the access panel to the rear of the server, and then remove the access panel.

## Step 3 — Remove the fan

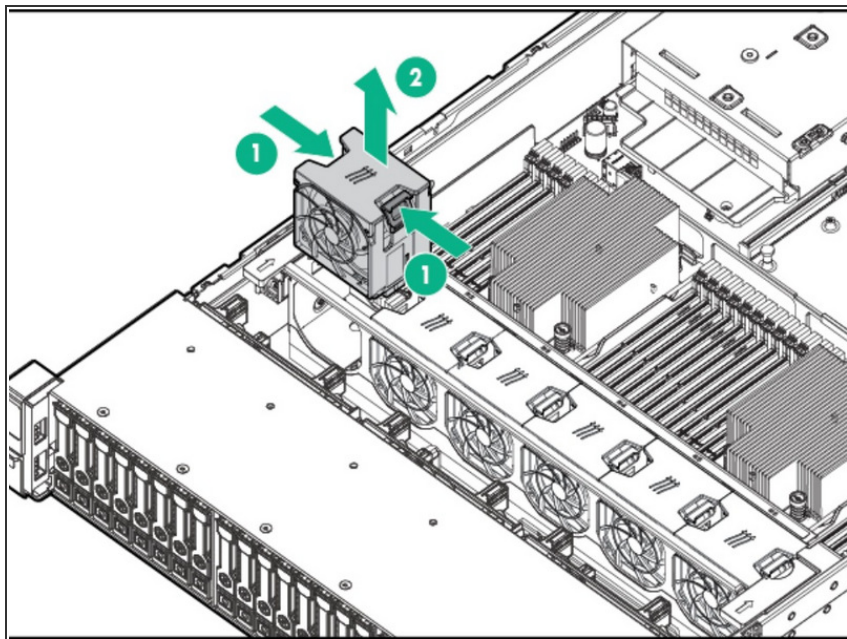

- Release the fan by grabbing the top, pressing the release tab, and lifting it out of the server.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-03 04:34:48 AM.